

# demi-LUNA™ Setup

Manufacturer	Model	Style	Alt.	Comments	Manufacturer	Model	Style	Alt.	Comments
BookerLAB	AMC-1	8			Motion Sound	Low-Pro	3	3A	
Crumar	Mojo	4				MS-145N			
	Mojo 61	2	2A, 2B	Enable Halfmoon LED must be lit		PRO-145			
Dr. Fishsticks	3-way	7				PRO-3			
GSI	Burn	2	2A, 2B	Set Speed Type to Temporary; EXT light must be lit		PRO-3T/3X			
	DMC-122	2	2A, 2B		R3-147				
Hammond	SK1/SK1-73	1	1A, 1B	Set Foot Device = CU-1	Neo Instruments	mini-Vent for Organ	1	1A, 1B	Requires Ashby Solutions Mini-Remote
	SK2					Ventilator	1	1A, 1B	
	XK-1c	1	1A, 1B	Set Foot Device = CU-1	Nord	Ventilator II	1	1A, 1B	Set Remote function to 9:00
	XK-3/XK-3c	1	1A, 1B	Set Foot Switch = CU-1		C1	1	1A, 1B	Rotor Control Type = HA (halfmoon)
	XK-5	1	1A, 1B			C2/C2D	1A	1B	Rotor Pedal Polarity = OP; Rotor Pedal Mode = Hd; 2-speed only (use Stop switch)
XK System	1	1A, 1B	Set Foot Switch = CU-1 in XK-3 or XK-3c	Electro 3					
Keyboard Partner	DB Expander (DBe)	6	6A		Electro 3HP				
	HX3				Electro 4 (all models)	1	1A, 1B	Electro 5 (all models)	Rotary Control = Half Moon; Rotary Pedal = Hold
Korg	BX-3	5	6	Requires Y-cable and programming				Stage 2 (all models)	1A
	CX-3					Stage EX (all models)			
Leslie	'Cream' pedal	1	1A, 1B			Stage 2 EX (all)			
Motion Sound	KBR-3D	3	3A						
	KBR-M								

This list is updated as new information becomes available. If you know of a product that will work with the demi-Luna, please send an email to [info@ashbysolutions.com](mailto:info@ashbysolutions.com).

